



# Commuter Series Installation Instructions

**1** Separate slipcover from outer shell.

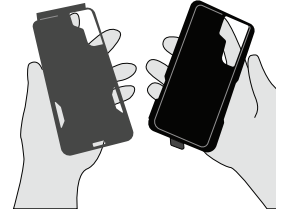

**2** Wrap slipcover around phone.

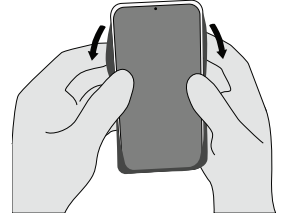

**3** Fit outer shell onto bottom of slipcover first, making sure charge port door is pressed through shell.



**4** Press around edges to secure case onto phone.

