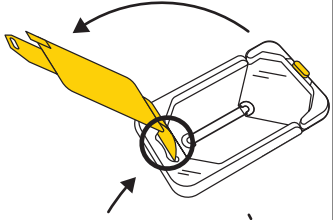
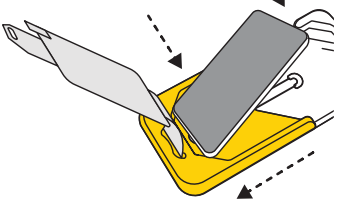
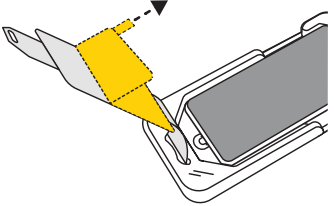
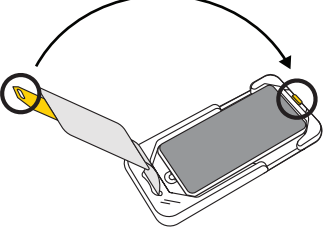
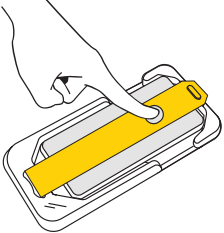


## Screen Protection Universal Alignment Tool Install Steps

<b>1</b>	Lift.*  *If screen protector is disconnected from tray, reinstall into bottom slot.	
<b>2</b>	Slide tray down using phone, insert phone in the tray and clean phone (see cleaning kit).	
<b>3</b>	Remove film with tab ①.	
<b>4</b>	Secure screen protector tab to top peg.	
<b>5</b>	Insert finger into top liner hole and press down glass.	
<b>6</b>	Hold finger down, peel liner back and remove finger. Let screen protector adhere across phone, then press out bubbles.	