


UNLIMITED SERIES INSTALLATION

PENCIL HOLDER INSTALLATION:

- 1 Pencil holder is optional
- 2 Remove rubber plug on right side of case
- 3 Insert the pencil holder through inside of case
- 4 Then pull elastic strap through to outside of case

CASE INSTALLATION:

- 1 After installing the pencil holder, insert tablet into the bottom edge of the case first
- 2 Push/pinch tablet into case, working around the case perimeter in a circle

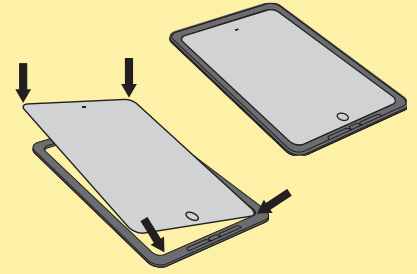

SCREEN PROTECTOR INSTALLATION:

- 1 Once tablet is installed into the case, clean the screen thoroughly
- 2 Remove the protective film on the adhesive side first
- 3 Using home button and edges of case to align protector, install the screen protector onto the tablet working from the bottom edge towards the top
- 4 Remove the protective film by pulling on tab

KEYBOARD INSTALLATION:

- 1 Once tablet is inserted into the case
- 2 Make sure keyboard is charged
- 3 Turn keyboard power switch on
- 4 Press "Fn+C" to turn on wireless matching
- 5 Open Wireless Networks on your tablet and click the keyboard name
- 6 Input numbers on tablet and press "Enter"


ACTIVATING KEYBOARD TRACK PAD:

- 1 In tablet setting go to "Accessibility", then "Touch"
- 2 Make sure the Assistive Touch is "on"
- 3 Press "Fn+command" to activate the trackpad

*Keyboard automatically sleeps if you do not use it within 10 minutes. To restart, press any key and wait 3-5 seconds.

KICKSTAND INSTRUCTIONS:

- 1 To open kickstand, pinch gray latch button and lift outer ring
- 2 Kickstand can be rotated to achieve four different orientations:
 - A. This orientation is recommended for typing and pressing on the tablet screen.
 - B. This orientation is recommended for viewing only.
 - C. This orientation is recommended for viewing only.
 - D. This orientation is recommended for typing and pressing on the tablet screen.
- 3 Snap outer ring back into place

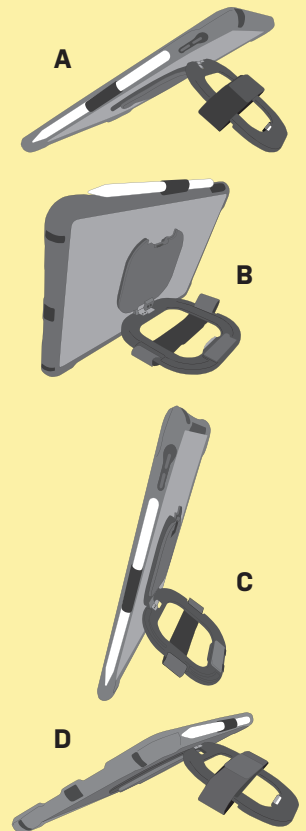

Unlimited^{Series}

UNLIMITED SERIES INSTALLATION

HAND STRAP INSTALLATION:

- 1 Pinch gray latch to open Kickstand before installing Hand Strap
- 2 Insert Hand Strap ends through slots at side of the kickstand
- 3 Fasten Velcro ends of strap together
- 4 Snap outer ring of kickstand back into place
- 5 Rotate Hand Strap for comfortable positioning

SHOULDER STRAP INSTALLATION:

- 1 Thread buckle cord through case anchor point
- 2 Pull cord loop through buckle hook
- 3 Repeat for other buckle
- 4 To adjust the shoulder strap, slide one or both of the length adjustment sliders

FOLIO INSTRUCTIONS:

- 1 The folio can be rotated to be used as a stand in landscape or portrait mode:
 - A. Rest bottom of tablet in the interior folio groove
 - B. Fold folio into a triangle to prop up the back of the tablet

**Folio can be configured into an acute triangle or an equilateral triangle depending on the angle you prefer*

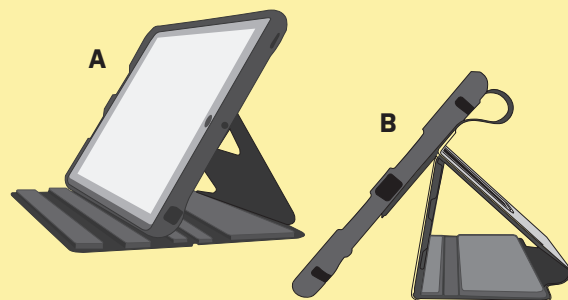


TABLE STAND INSTRUCTIONS:

- 1 Remove Allen wrench from underneath the stand base
- 2 Set stand on flat surface and lift long arm open
- 3 Release tablet holder arms
- 4 Insert tablet into holder either horizontally or vertically
- 5 Click holder hinges firm on tablet
 - A. The holder spins 360°, so you orient tablet into portrait or landscape mode[†]
- 6 Using the Allen wrench, adjust then tighten the angle of tablet holder hinge, and stand hinge

**Stand and tablet holder feature cable holes to thread wires through*

†To attach a tablet with case and kick stand, the holders of the stand should be attached towards one end of the tablet

PRIVACY SCREEN INSTRUCTIONS:

- 1 Privacy Screen Protector can be installed over bare device screen or a screen protector
- 2 Set Unlimited Series case on a flat surface
 - A. There is no need to remove your tablet from inside the case
- 3 Using the home button and bottom edge of case for alignment, attach Privacy Screen on top of screen or screen protector
- 4 To remove Privacy Screen, pull from the upper right corner

**Privacy screen adhesive can be cleaned with water and a lint-free cloth*

**When not in use, store Privacy Screen on included backer board*



Unlimited^{Series}